



JS800

NO.	DESCRIPTION	NO.	DESCRIPTION
1	HOUSING ASSEMBLY	28	STATOR
2	TAPPING SCREW 3.9X35	29	CORD SLEEVE
3	TAPPING SCREW 3.9X19	30	AC-CORD & PLUG
4	BASE PLATE	31	TAPPING SCREW 3.9X14
5	FIXING PLATE	32	STRAIN RELIEF
6	SCREW M4X14	33	CHANGER-OVER SWITCH
7	PIN Ø4	34	DUST WAY
8	ECCENTRIC WHEEL	35	CONNECTING PLATE
9	ROLLER SUPPORT	36	CIRCLIP
10	TORSION-SPRING	37	WASHER
11	BLADE	38	FINGER GUARD
12	PENDULUM ASSEMBLY	39	BACK SUPPORT
13	FRONT SUPPORT	40	SPRING
14	BUSH	41	COVER
15	GEAR	42	LASER HOLDER
16	CIRCLIP	43	TAPPING SCREW 2.9X6
17	WASHER	44	TAPPING SCREW 2.9X9
18	NEEDLE ROLLER BEARING 6.5X9.5X11MM	45	LASER
19	COUNTER BALANCE	46	PCB FOR LASER
20	PENDULUM BAR	47	LASER HEAD BUTTON
21	BEARING HOLDER	48	LASER HEAD SWITCH
22	BEARING 608-2RS	49	PENDULUM KNOB
23	BRUSH HOLDER	50	SPRING
24	BRUSH HOLDER SUPPORT	51	METAL BALL
25	CARBON BRUSH	52	SPEED REGULATOR
26	ROTOR	53	SWITCH
27	BEARING 607-2RS	54	TERMINAL BLOCK